Remote Controller-R11



LED Zigbee Remote Controller

Important: read this information before installation.

- Apply to single color
- 1 zone dimming
- Ultra sensitive adjustment touch slide
- Each remote con match one or more receiver
- Ultra-thin design, Light weight and high efficiency
- Operate with LED indicator light
- Magnet on the back makes it easy to stick to back holder or any metal surface
- Warranty 5 years
- Separate module for Zigbee 3.0

Applications










Suitable for WoodUpp LED Striplight

Technical Parameters

	Output signal	RF(2.4 GHz)
	Working voltage	3VDC
Input &	Working current	<5mA
Output	Standby current	<10µA
	Standby time	1 year
	Remote distance	10m (Barrier-free space)
	Working temperature	-30° - +55°C
Environment	IP rating	IP42
	EMC standard (EMC)	ETSI EN 301 489-1 V2.2.3 and ETSI EN 301 489-17 V3.2.4
Safety & EMC	Safety standard	EN62368-1:2020+A1 1:2020
	Radio Equipment (RED)	ETSI EN 300 328 V2.2.2
	Certification	CE, EMC, LVD, RED
Warranty	Warranty	5 years
Other	Net weight	24g
	Gross weight	64g


Key functions

R11 1 zone dimming remote

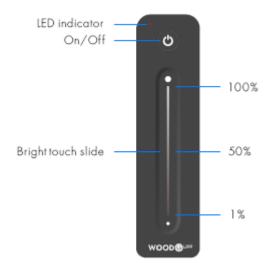



Mechanical structures and installations

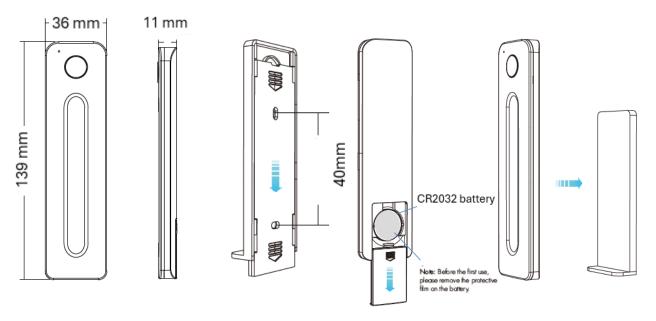

To fix the remote there are three options:

- Fix the remote "back holder" on the panel with the 2 brackets and screws in the packing
- Adhere the remote "back holder" to the panel with paster
- Can be adsorbed directly onto metal surfaces

Match Remote Control (two match ways)

End-user can choose the suitable match/delete ways. Two options are offered for selection:

Use the controllers match key

Match:

Short press match key, immediately press on/off key on the remote. The LED indicator fast flash a few times means match is successful.

Delete:

Press and hold the match key for 5s to delete all match The LED indicator flashes fast a few times and all matched remotes were deleted.

Use Power restart

Match:

Switch off the power, then switch on power, repeat again. Immediately short press on/off 3 times on The remote. The lights blink 3 times means match successful.

Delete:

Switch off the power, then switch on power, repeat again. Immediately short press on/off key 5 times on the remote. The light flashes 5 times means all matched remotes were deleted

Safety information

- 1) Read all the instructions carefully before you begin this installation
- 2) When installing batteries, pay attention to the battery positive and negative polarity A long time without the remote control, remove the battery When remote distance becomes smaller and intensive, replace the battery
- 3) If there is no response from the receiver, please re-match the remote
- 4) Gently handle the remote, beware of falling
- 5) Only use for indoor and dry locations